

INSPECTION & MAINTENANCE MANUAL



Aqua-Ponic™ Stormwater Biofiltration System

Manufactured By:



AquaShield,™ Inc.
2733 Kanasita Drive
Suite 111
Chattanooga, TN 37343
(888) 344-9044
www.aquashieldinc.com

June 2020

INTRODUCTION

As the stormwater industry has matured there has been an ever-increasing movement toward the implementation of Low Impact Development (LID) products and practices as the preferred means to implement stormwater control measures within “green infrastructure” (GI) stormwater management programs. The Aqua-Ponic™ Stormwater Biofiltration System is now offered by AquaShield™, Inc. to meet the design challenges of LID principles along with enhanced aesthetics in an urban environment.

This Inspection & Maintenance (I&M) Manual includes information to better assist stakeholders with understanding the importance of implementing an effective program to ensure long-term functionality of an Aqua-Ponic™ system installation. The following aspects of an Aqua-Ponic™ system are described in this I&M manual:

- Aqua-Ponic™ Basics
- Mode of Operation
- Inspection and Maintenance.

AQUA-PONIC™ BASICS

Aqua-Ponic™ technology is a modular proprietary, permanent, post-construction biofiltration system designed to remove total suspended solids (TSS), Total (insoluble) Phosphorus, and heavy metals such as copper and zinc from stormwater runoff. A distinguishing feature of the Aqua-Ponic™ is its combination of filtration with the principles of *hydroponics* - a method of hydroculture for growing plants without soil by instead using mineral nutrient solutions in a water solvent. That is, the Aqua-Ponic™ uses stormwater runoff as a nutrient asset instead of a liability. Terrestrial plants are grown with only their roots exposed to the nutrient liquid while being physically supported by a plant stabilization filter medium. The hydroponic design provides a sustainable water supply to the vegetation during those periods of time when hot and/or dry conditions may prevail.

The Aqua-Ponic™ system utilizes hardy low-profile perennial vegetation such as native grasses, shrub grasses and/or ornamental flowering plants. A facility can utilize a single type or multiple types of plants to enhance the viewscape. It is important to specify plants that demonstrate viability within the climatic zone of a site installation.

MODE of OPERATION

The minimum 12-inch plant stabilization media layer within the Aqua-Ponic™ serves three operational roles by providing (1) pollutant filtration, (2) plant stabilization and (3) nutrient uptake. Figure 1 is an illustration of the Aqua-Ponic™ Biofiltration System. Design elements include a three (3)-inch top layer of pea gravel underlain by the plant stabilization filter bed. Water enters the system as sheet flow and then flows downward under gravity flow conditions through the pea gravel, filter bed and the associated root systems of the vegetation. The pea gravel layer serves to protect the underlying plant stabilization filter bed while dispersing the influent stormwater runoff across the treatment area. The filtered water then percolates further downward into the underlying water sump. A supporting and removeable perforated stainless-steel sheet underlies the filter bed. A post-filtration flow control orifice is placed across the outlet pipe opening in order to facilitate an even distribution of influent runoff across the filter treatment

area. Crushed recycled landscaping glass can be used as an alternative to the top pea gravel layer which further enhances colorful viewscape options for the Aqua-Ponic™.

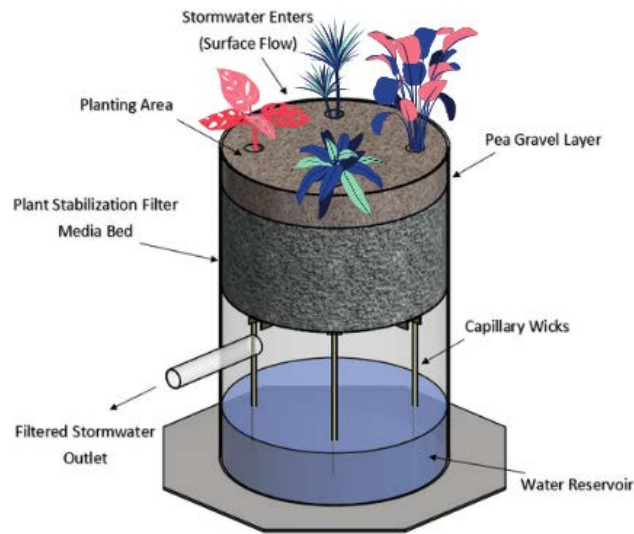


Figure 1. Diagram of Aqua-Ponic™ Biofiltration System.

The sump serves as a water reservoir for the vegetation during quiescent periods. A series of wicks are suspended from the base of the plant stabilization bed via rubber grommets (eyelets). The wicks extend downward to near the base of the sump. Using capillary action, water is wicked up to the plant stabilization filter bed which serves to provide a sustainable supply of water and any soluble nutrients and metals not trapped in the filter bed during a runoff event. Treated water in excess of the sump storage volume exits the system via the outlet opening just below the base of the filter bed.

Each Aqua-Ponic™ unit is constructed of lightweight and durable Polymer Coated Steel (PCS) to provide long term operational and structural functionality. Aqua-Ponic™ units are shipped with the inclusion of any perforated sheets and the capillary wicks in place according to the model size. The plant stabilization filter media is shipped simultaneously in separate containers. For aesthetic reasons it is the responsibility of others to choose either the pea gravel or any recycled glass landscaping stone for the top bed layer. It is also the responsibility of others to specify, acquire and plant the vegetation. AquaShield™ does not specify the plants for Aqua-Ponic™ systems but can assist where warranted.

INSPECTION & MAINTENANCE

Maintenance frequency for the Aqua-Ponic™ will ultimately be determined by site-specific pollutant loading conditions. Inspections of the, plants, top gravel layer and the upper portion of the plant stabilization filter media can be accomplished from the surface without special tools. AquaShield™ recommends periodic inspections following installation to determine a site-specific maintenance cycle to ensure functionality of the media and the vegetation.

We recommend that periodic system inspections be performed to determine the pollutant and trash loading characteristics. In general, quarterly inspections should be performed during the first year of operation to better anticipate maintenance frequency in the first year and subsequent years of operation.

An Aqua-Ponic™ maintenance event should first determine any obvious signs of degradation, displacement, sediment or trash accumulation, or oil in the upper layers of the unit. The top gravel layer should be completely replaced and can be removed by shoveling or vacuuming. The top several inches of the underlying plant stabilization filter media may be replaced at the same time if warranted. Care should be taken not to damage the plants or disturb rootballs during limited media replacement. Care should also be taken when replacing a plant to avoid disturbing remaining plants.

Depending on site conditions, it may be necessary to remove all the media and all the plants and completely replace these components of the system. It is recommended that the wicks be replaced if a system is fully replaced with stabilization media and plants.

Sediment can accumulate in the base of the water supply sump over a period of time. After removing the pea gravel layer, the plants and the plant stabilization filter media bed, the perforated metal plate should be removed to access the water supply sump from the surface for the purpose of vacuuming water and any accumulated sediment. The wicking ropes should also be replaced at this time. The perforated metal plate with the new wicking ropes should be set in place prior to installing the plant stabilization filter media on top of the plate.

AquaShield™ can provide the plant stabilization filter media, wicks and any associated grommets. Although unlikely, the supporting stainless-steel plate can also be supplied by AquaShield™ if its replacement is necessary. While we recommend that the pea gravel be replaced as warranted, it may be feasible to wash the gravel during a maintenance event. However, in most cases it is more efficient to replace the pea gravel or any landscaping glass to avoid disposal of water that was used to clean either of those materials.

All I&M activities can be performed from the surface without the need for AquaShield™ personnel to be present. We recommend that all materials removed during the maintenance process be handled and disposed in accordance with all applicable federal, state and local guidelines. Depending on the influent pollutant characteristics of the facility drainage area, it may be appropriate to perform Toxicity Characteristics Leaching Procedure (TCLP) analyses on representative samples of the spent filter media to ensure that the handling and disposition of materials complies with any applicable environmental regulations and practices.

Attached is a two-page Aqua-Ponic™ I&M Log to document service provider(s), activities and scheduling.

Next two pages include I&M Logs

AQUA-PONIC™ INSPECTION & MAINTENANCE LOG

MAINTENANCE COMPANY INFORMATION

Company Name: _____

Street Address: _____

City: _____ State/Prov.: _____ Zip/Postal Code: _____

Contact: _____ Title: _____

Office Phone: _____ Cell Phone: _____

ACTIVITY LOG

Date of Cleaning: _____

Time of Cleaning: Start: _____ End: _____

Date of Next Inspection: _____

Floatable debris present: Yes No Action taken: _____

Oil present: Yes No Action taken: _____

Filter Media Needs Replacement: Yes No

Structural damage: Yes No Where: _____

Clogging: Yes No Describe: _____

Additional Comments and/or Actions to be Taken	Time Frame



Inspection & Maintenance Schedule Log

First Year Post-Construction

Date Installed/Activated: _____

	Month											
Activity	1	2	3	4	5	6	7	8	9	10	11	12
Inspect and Clean as needed			X			X			X			X
Inspect Bypass and maintain as needed			X			X			X			X
Clean System*												X

Second and Subsequent Years Post-Construction

	Month											
Activity	1	2	3	4	5	6	7	8	9	10	11	12
Inspect and Clean as needed												X
Inspect Bypass, maintain as needed												X
Clean System												X